


## 7 Assembly/Disassembly dildo

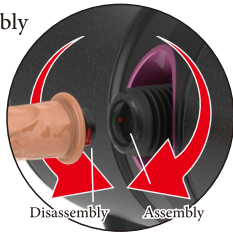

Align the red card slot on the dildo with the red card point on the machine and insert it. Turn the dildo clockwise to attach it. Turn the dildo counterclockwise to remove it.

## 8 Turn the main machine



Place the main machine on a horizontal platform and remove the dildo. As shown in the picture, hold the machine with one hand and hold the red part with the thumb of the other hand. Use a little force to turn the main machine (Note: please make sure to remove the dildo before turn the main machine)

Rotation angle: 360 degrees



The lifting height is 3 cm.

b-1. Raise the main machine Place the machine on a horizontal platform and remove the dildo. As shown in the picture, hold the main machine with hands, press down slightly and release your hands after hearing a "click" sound, and the main machine will pop up

### b-2.Resetting

Place the machine on a horizontal platform and remove the dildo. As shown in the picture, hold the main machine with hands, press down slightly, and release your hands after hearing a "click". The main machine will be reset. (Note: please make sure to remove the dildo before raise or reset the main machine)

## 9 Adjust the telescopic joint.



After use, press the telescopic joint back slowly with moderate force using your palm

### Attentions

- \*Pls running the machine without any attachment firstly, when it is running normally, then let the machine work with dildo.
- \*It's strictly forbidden for patients with high blood pressure or heart disease or those who are not suitable for strong stimulation or with gynecological disease.
- \*Never directly wash the machine with water or any cleaning agent! It's recommended to clean it with wet tissue.
- \*The product is subject to change without further notice. Please always refer to the materials accompanied with the product for actual

### Applicable Objects

This product is ideal for:  
Lovers who want to enhance their pleasure in sex life;  
Modern ladies who want to have peculiar sex experience;  
Women who do not live with their husbands and are not able to relieve their desire;  
Single ladies who live alone and do not want to sleep around;  
Ladies with extreme sexual functions - frigidity or strong desire;  
Women whose husbands are not well physically or with sexual dysfunction.

### Machine Maintenance

- \*Application environment:  
0 - 65°C, RH 45% - 85%.
- \*Storage environment:  
Dry and away from fire source The machine is not totally waterproof in design, so please clean it with wet tissue.
- \*Please cut the power after use.
- \*If the machine is not to be used for a long time,  
please remove batteries from remote controller.